

APPENDIX

Error codes

In total 14 different error codes can be shown.

Code	Meaning
1	The main plug is plugged in the other way round.
2	The temperature in the decorative fire is too high.
3	The internal sensor of the decorative fire measures an invalid temperature.
4	The external room sensor of the decorative fire, measures an invalid temperature.
5	The internal safety control detects a failure.
6	Communication is lost.
7	Flame not detected in time.
8	The burner control reports a failure and the flame could not be detected in time.
9	Not used.
10	The burner control reports a failure when the pilot flame has been switched on for less than 30 minutes (type SP only).
11	The burner control reports a failure when the pilot flame has been switched on for more than 30 minutes (type SP only).
12	The burner control reports a failure while the burner control is not switched on.
13	The burner control reports a failure , while the burner control is switched on.
14	Reserved.